
7 6 5 4 3 2 1

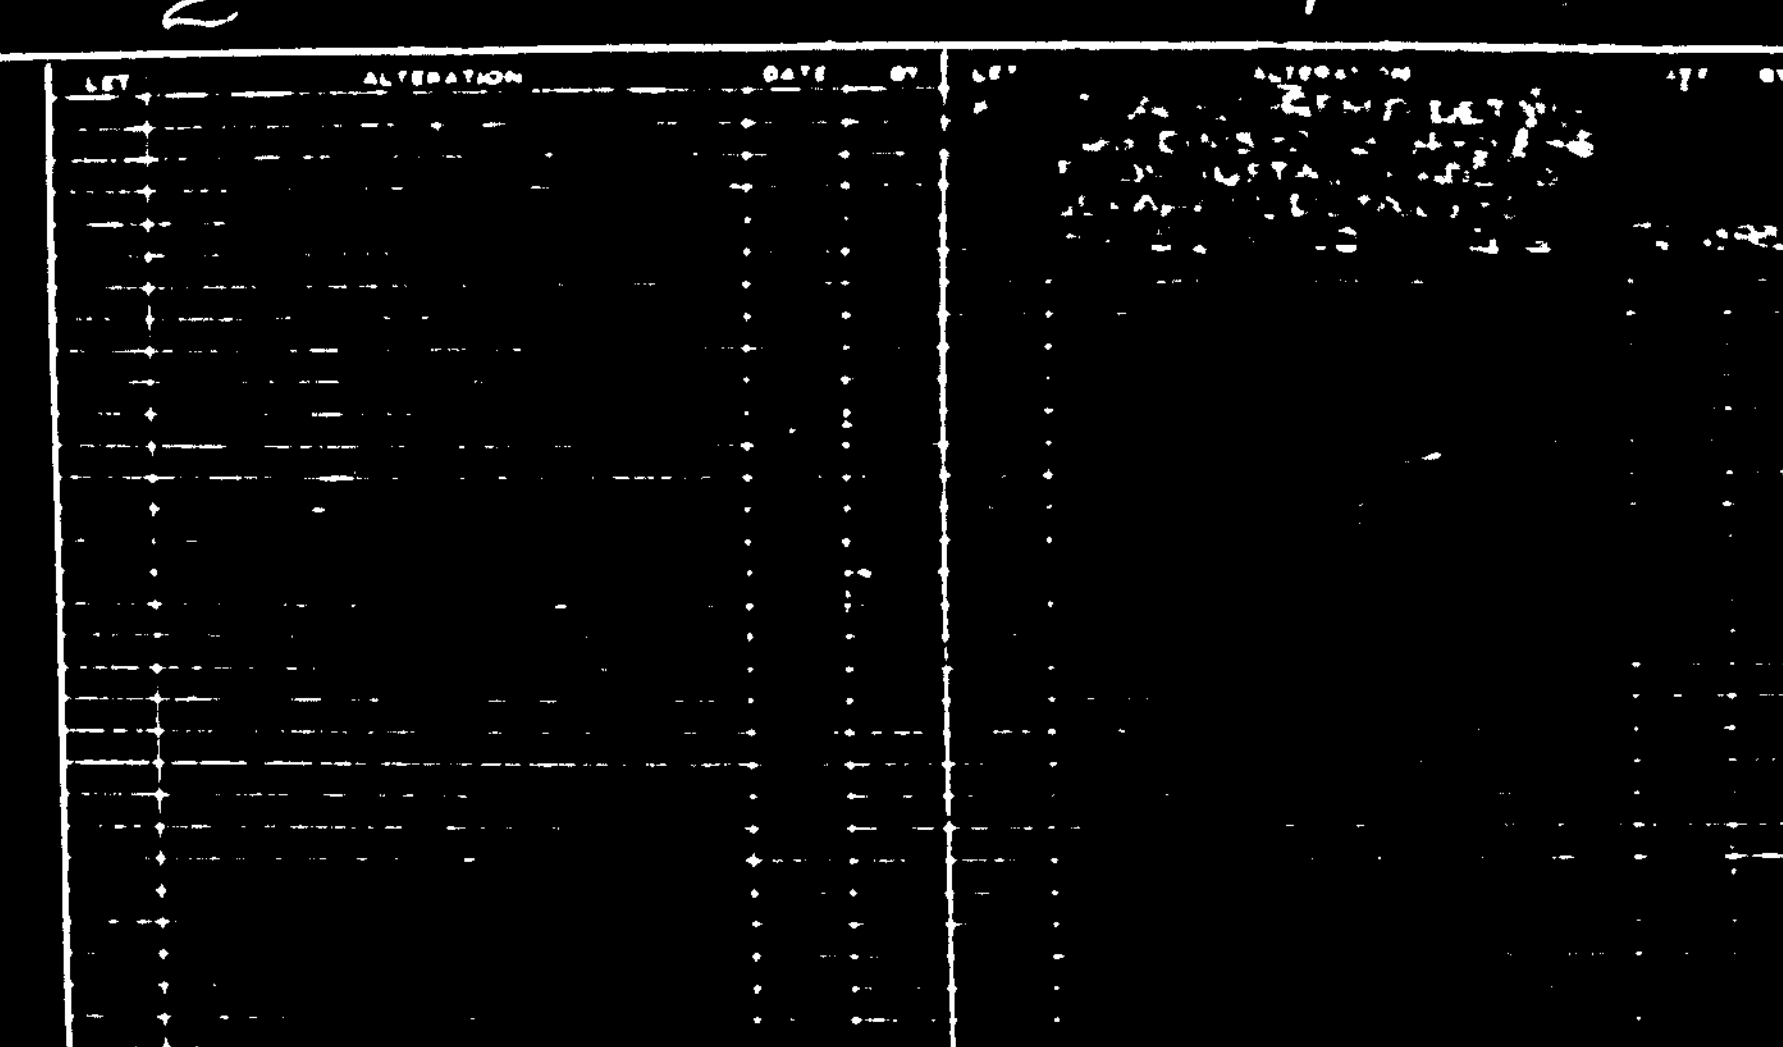

SEE END VIEW STA #866

HOLES

(K) DETAIL -4

TRIM CORNER TO CLEAR STRINGER

SCALE 6"=1'-0"

(K) DETAIL -6

AN210-A PULLEYS

AN23-?A CLEVIS BOLT
AN320-3 NUT
AN380 COTTER PIN
AN960 WASHER

AN22-?A CLEVIS BOLT
AN320-3 NUT
AN960-10 WASHERS
AN380-2 COTTER PIN
ON PBY-1 ONLY

(28B1043 (REF)

LOCATE ON ASS'Y

-4 (REF)

AN210-A PULLEYS
ON PBY-1 ONLY

37½° (REF)

AN442-06

ELEVATOR

CUT OUT TO CLEAR CABLE


DRILL #30 (C-H)
THRU
AN392-21
FLAT HD. PIN
AN380-2-2
COTTER PIN

THRU-2¢-3
AN24-16 CLEVIS BOLT
AN320-4 NUT
AN380-2-2 COTTER PIN
AN960-416 WASHER

AN442-05

RH PULLEY

⑦ BRACKET SUB ASSEMBLY

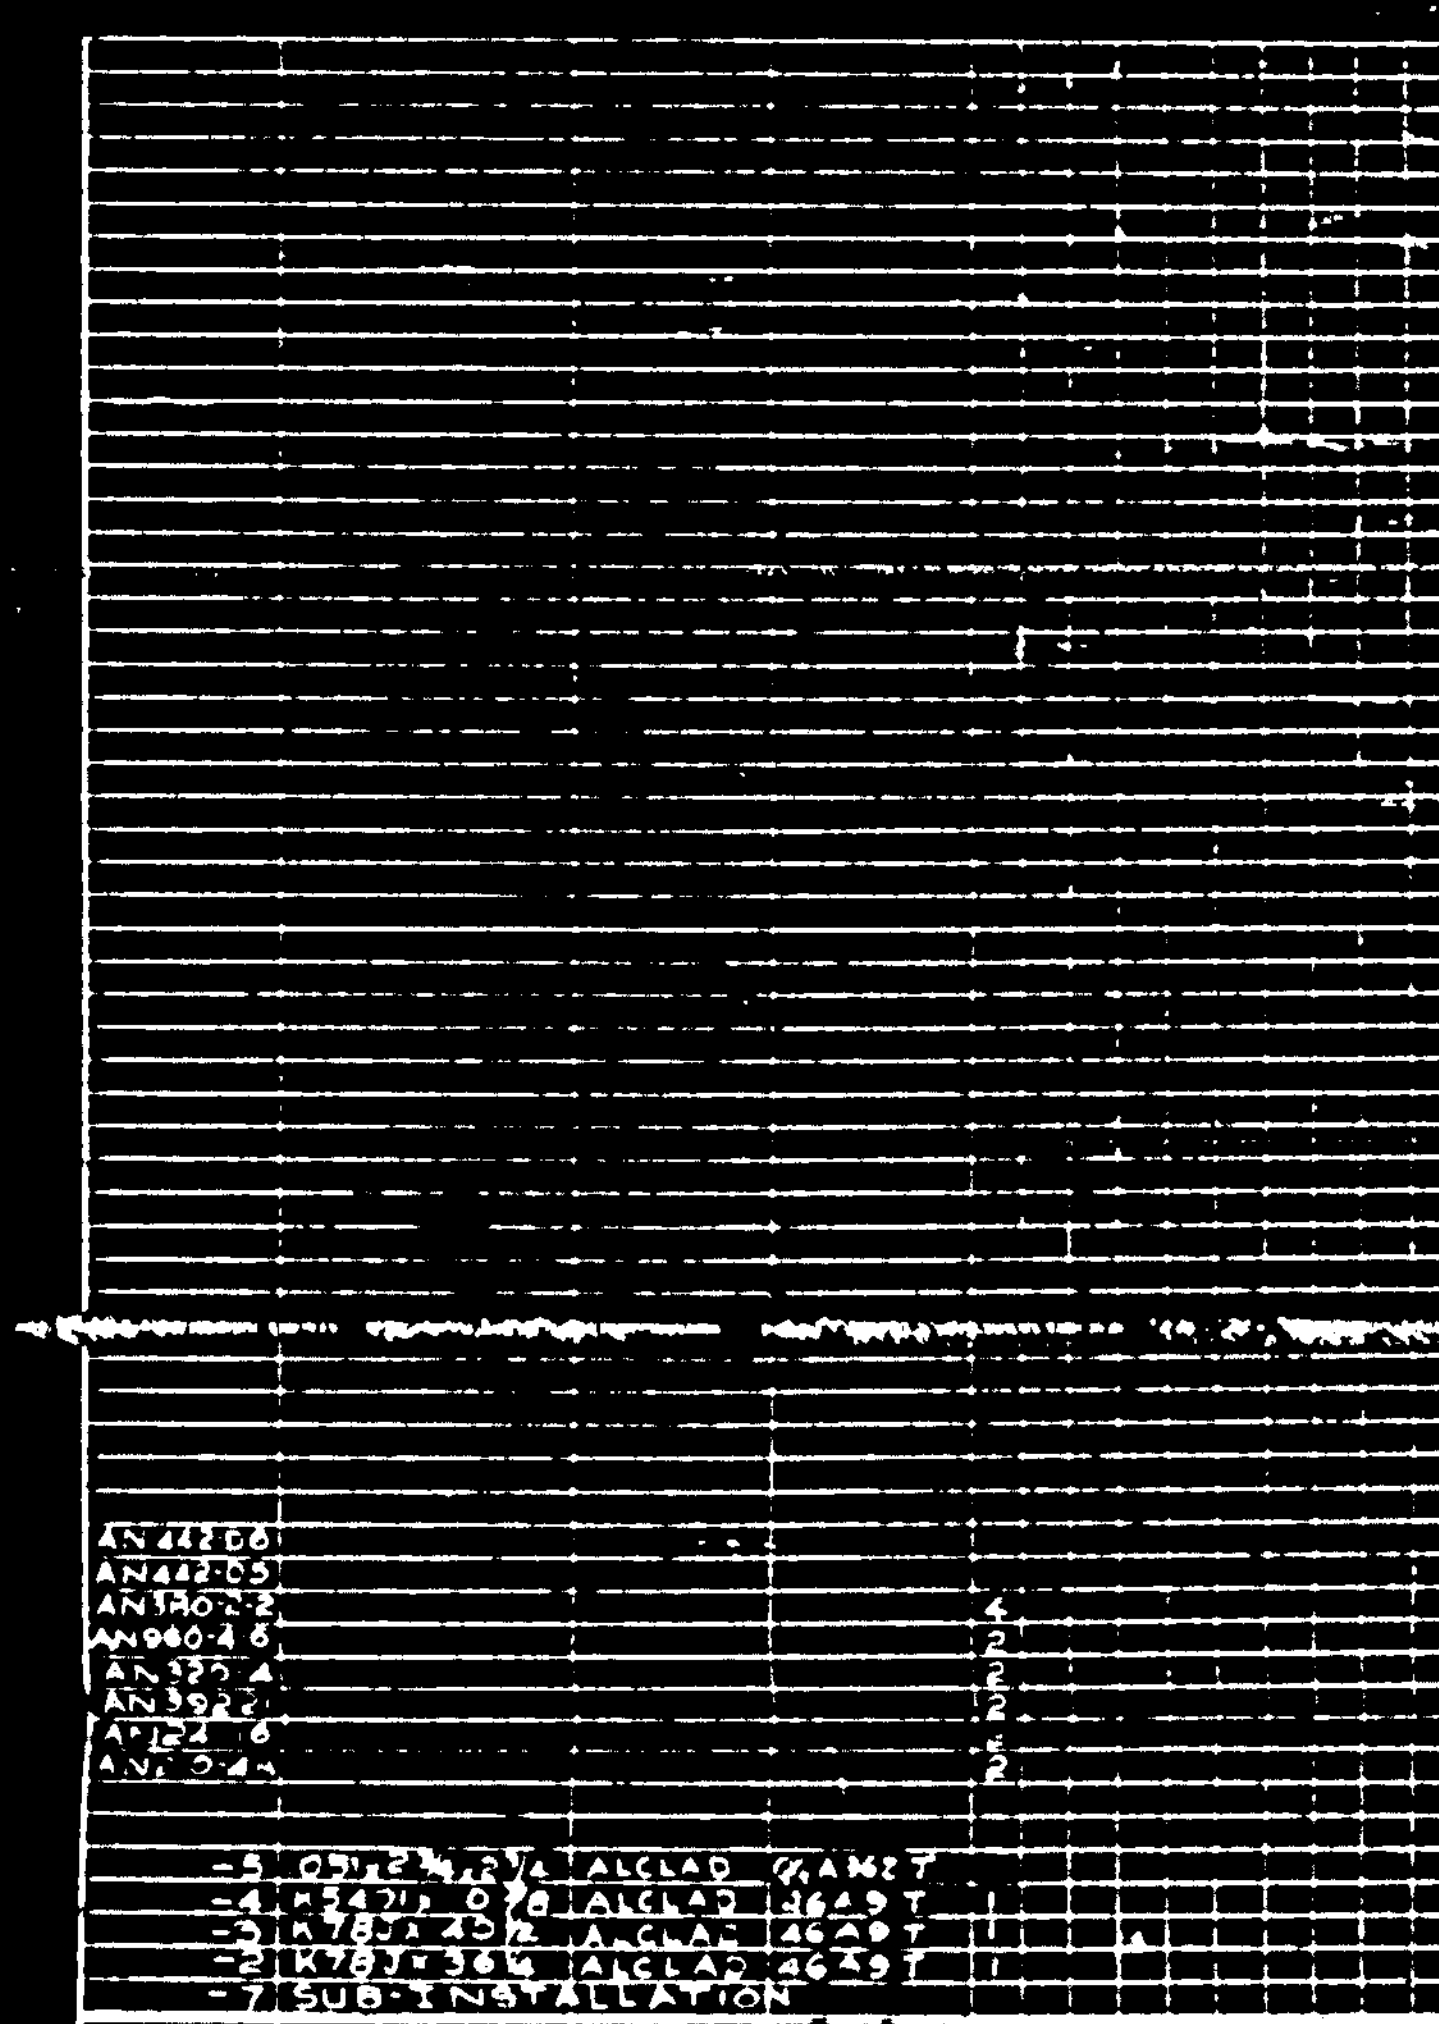

℄ STA #866
AFT

SEE END VIEW STA #856

128 HOLES

$20\frac{3}{16}$

℄ SHIP



C #77713
C #88476
C #91676
C #70496

37½° (REF)

(K) DETAIL -5

(K) DETAIL -3

℄ STM

	MODEL	NEXT ASSY	
-50	28-5MA	28C5300	1
-50	PBY-5A	28C5700	1
-50	PBY-5A	28C5564	1
-50	PBY-5	28C5000	1
-50	PBY-5	28C5000	1
-50	XPBY-5A	28C4025	1
	PBY-4	28C2600	
	PBY-3	28C2000	
	PBY-2	28C2000	
	PBY-1	28C1000	
	XP3Y-1	28C1000	

REQUIREMENTS PER AIRPLANE

REPLACES 28C1085 OF 2-26-36 1.88 CALC WT

REPLACED BY ACT WT

SCALE 12"=1'-0"

STAMP PART NUMBER WHERE SHOWN

PART No	STOCK	MATERIAL	SPEC.
AN442-05			
AN526-0			
AN380-2-2			
AN960-10			
AN960-10			
AN960			
AN320-3			
AN23-20			
AN210-2A			
AN210-1A			
28C1084			
28C085			
-6	.062×1⅛×7¾		QQA362-T
-7	SUB-INSTALLATION		

PARTS LIST PER A/P

ENG. FILE

NAVY NONE

HEAT TREAT FINISH

NAME INSTALLATION-CONTROL CABLE PULLEYS-STA

CONSOLIDATED VULTEE AIRCRAFT CORP. SAN DIEGO DIVISION

J 28C1085

8543